


# RV WATER LEVEL INDICATOR

THE R. V. ELECTRONICS WATER LEVEL INDICATOR HAS BEEN DESIGNED FOR EASY INSTALLATION. THE SENSORS ARE INSTALLED IN THE SIDE OF THE WATER TANK, THEREFORE, IT IS NOT NECESSARY TO REMOVE THE WATER TANK FROM ITS MOUNTINGS, HOWEVER, SOME CARE SHOULD BE TAKEN WHEN CHOOSING THE POSITION AND FITTING OF THE TOP GAUGE UNIT. CHOOSE A POSITION TO PLACE THE WATER GAUGE WHERE IT IS POSSIBLE TO FEED THE WIRING LOOM UP THROUGH THE WALL CAVITY OR CUPBOARD TO THE GAUGE. THE WIRE LOOM LENGTH IS 7.5 METRES LONG, SO THE DISTANCE BETWEEN WHERE THE GAUGE IS TO BE FITTED AND THE SENSORS MUST BE LESS THAN 7.5 METRES. SHOULD A GREATER DISTANCE THAN THIS BE REQUIRED A 2.5 METRE EXTENSION CORD IS AVAILABLE. **PART NUMBER WG 8**

## INSTALLATION INSTRUCTIONS

1. Drain all the water from the water tank.
2. Choose the side of the water tank **closest** to where the water gauge is to be fitted (**7.5m cord**) (See step 7 before making this decision.)
3. Mark 5 positions in the side of the water tank. See drawing below. (**Do not position on sharp bends or curves.**)

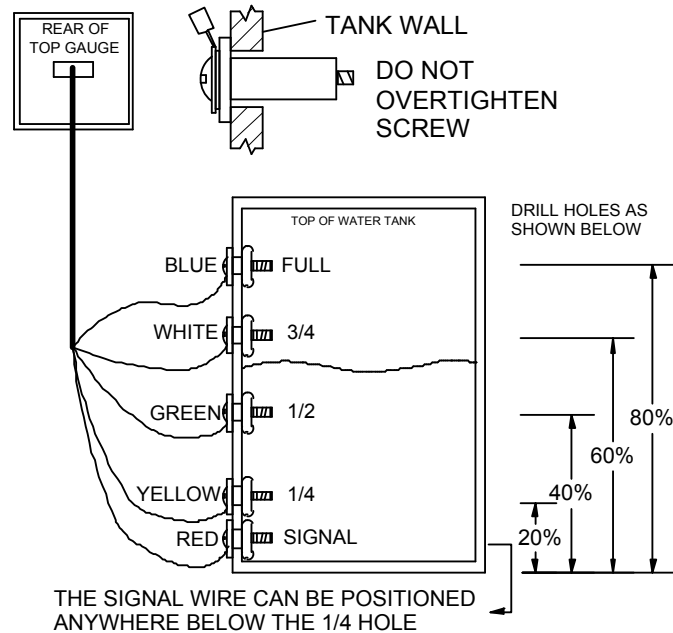


4. Using a **10mm or (3/8 in)** drill, drill 5 holes in the water tank at the marked positions. Remove the burrs from around the hole.
5. Crimp the correct colour wire into the terminal and place it under the screw head.
6. Insert the sensors into the holes and tighten the screws. (**Do not over tighten**).

7. Choose a position to place the water gauge where it is possible to feed the wiring loom through the wall cavity or cupboard to the gauge. Using a 16mm hole saw, **carefully** drill a hole in the internal wall in the centre of where the gauge is to be fitted. Be careful not to drill into wall beams and existing wiring.

**Alternatively** you may choose to cut a **square** hole with a blade knife, thus reducing the risk of cutting through wires behind wallpanelling. Feed the wiring loom up through to the water gauge and connect the plug into the back of the gauge. Remove peel off backing from the adhesive tabs provided and attach the gauge to the wall.

All square gauges come complete with a pair of joining links, which enable multiple units to be easily joined together in panel or cube form.

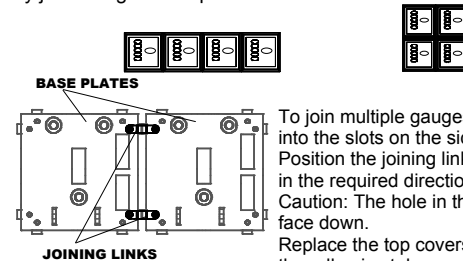

To join multiple gauges together, insert a flat screwdriver into the slots on the side of the gauge and gently twist. Position the joining links on the posts of the base plate in the required directions. Caution: The hole in the centre of the joining link must face down. Replace the top covers and attach to the wall using the adhesive tabs provided.

8. Fill the water tank and check the operation of the water gauge by pressing the button labeled **WATER**. As the water rises the green lights will illuminate. The red reserve light will illuminate when the water level drops below 1/4 full.

For battery replacement use a small flat screwdriver and insert it into the slots located on both sides of the water gauge unit and lever the two halves apart. Replace battery with a 12 volt **A23** battery.

## WARNING

**DO NOT UNDER ANY CIRCUMSTANCES USE THIS WATER LEVEL INDICATOR IN FLAMMABLE LIQUIDS. THIS PRODUCT IS FOR USE IN WATER ONLY.** If you have any questions regarding this product, please call (08) 8395 9300.

Another quality product from

[www.rvelectronics.com.au](http://www.rvelectronics.com.au) EMAIL: [rvelect@bigpond.net.au](mailto:rvelect@bigpond.net.au)  
 HEAD OFFICE: 4A VISOR COURT, HOLDEN HILL, SOUTH AUSTRALIA 5088  
 PHONE: (08) 8395 9300 FAX: (08) 8395 9400

**MADE IN AUSTRALIA**